

Brush Roll

The rotating brush roll sweeps and combs the carpet nap. Keep the brush roll free from hair and threads so it will continue brushing the carpet nap. When the bristles no longer touch a piece of cardboard held across the bottom plate, the brush roll should be serviced by an Authorized Warranty Service (refer to Service Information in the front of this booklet).

Cleaner Care

NOTE: Disconnect power cord from electrical outlet before cleaning unit.

To keep the vacuum cleaner looking new, it can be wiped with a damp cloth and a mild soap solution, then thoroughly dried. Never use any type of chemical as chemicals can damage the cleaner.

Storage

The cleaner should be stored in a clean, dry place with the Power-Touch handle removed from the wands.

Carpet Cleaning Adjustment

 
The brush height is instantly and automatically adjusted to any carpet pile length. The floating head feature of your motorized nozzle allows the brush to float evenly and parallel to all carpet pile surfaces without manual adjustment.

Edge Kleener®

Edge Kleener® feature provides for improved cleaning of carpets near walls and stationary furniture. Slots on the sides of the nozzle increase airflow to the edges of the cleaner and add to the cleaning efficiency of the cleaner. To operate, simply run cleaner along edge board. Edge Kleener® operates instantly and automatically.

www.thinkvacuums.com
**Your Central Vac
Headquarters**

To Reorder:
800-322-2965



HOW TO ASSEMBLE AND USE

Power-Touch® Handle
Remote ON/OFF Selector
for bare floor or carpet
Carpet push down on front
Off middle position (on some models)
Bare floor push down on back

Vacuum Control
Cleaning suction is
reduce by pushing lever
down to LOW position.
Place lever at HIGH
position to increase
suction for carpet
cleaning.


1. Snap wands together.
2. Put wands into socket.
3. Push motorized nozzle plug into retainer; secure cord in slot (see Detail A).
4. Place Power-Touch hose handle and button locks.
5. Open the inlet cover and hold the hose cuff so the power cord is opposite the cover.
 - a. Plug the hose into the inlet,
 - or
 - b. Plug the hose into the inlet and connect the polarized plug to an outlet.
6. Step on motorized nozzle; pull back on handle.
7. Push on; select bare floor or carpet cleaning.

Power View®

Rotating brush roll could cause damage to bare floors. Be sure brush roll is stationary for bare floors; turning for carpet. Refer to Power-Touch handle; Remote Bare Floor/Carpet Selector.


Headlight

NOTE: Headlight turns on ONLY when brush roll is turning.

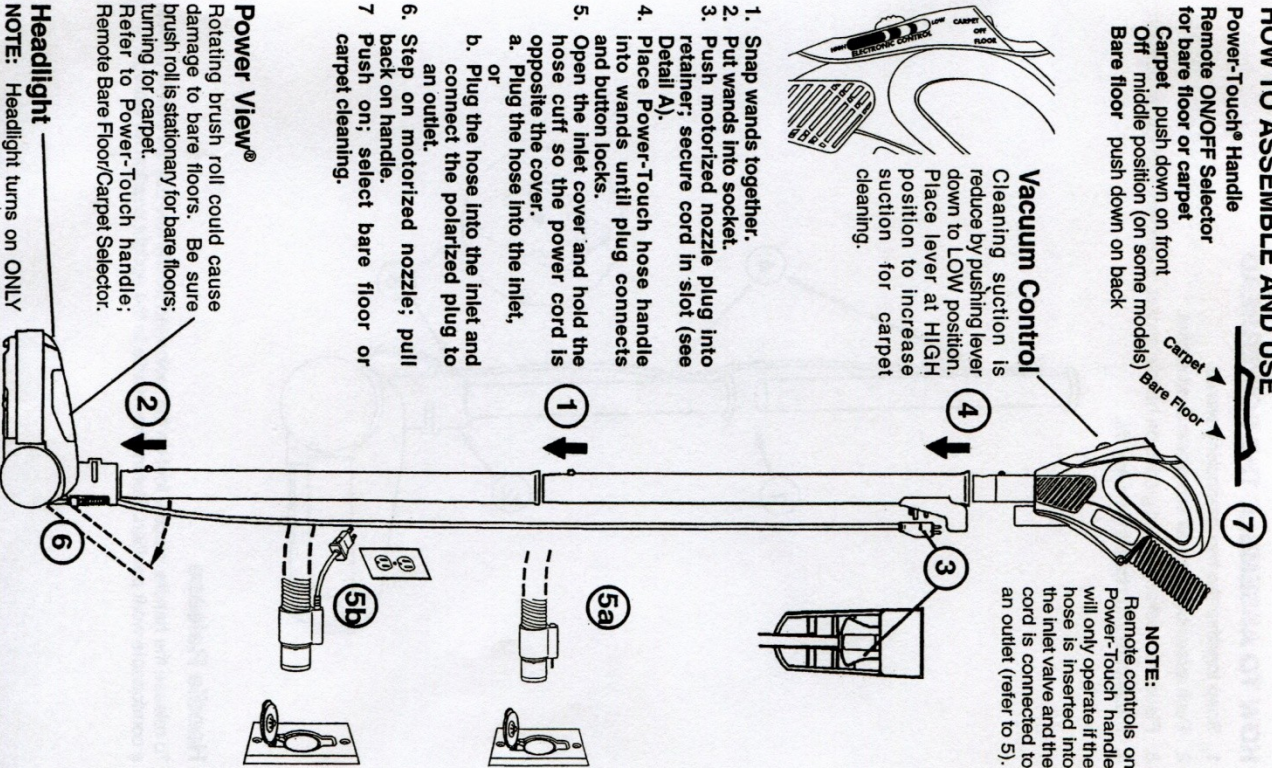

HOW TO ASSEMBLE THE POWERHEAD

1. Snap together the two interlocking wands.
2. Push assembled wands into powerhead socket.
3. Place cord between cord guides on handle socket, as shown, and turn to position.
4. Press cord into channels on wands.

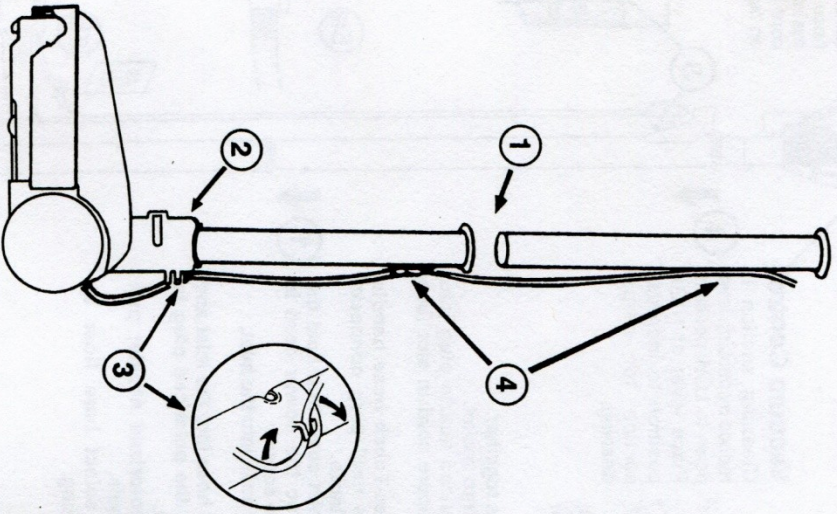

Handle Release

To release the handle, place a foot on the motorized nozzle and pull the handle back to a comfortable work position. Return the handle to the upright position for storage.

HOW TO MAINTAIN


The instructions given in this booklet serve as a guide to routine maintenance. To avoid unnecessary service calls check the belt and brush roll often. Replace the belt if it is stretched or cracked and clean the brush roll bristles when they are wrapped with thread and hair.

Brush Roll Belt and Headlight

The brush roll belt on the motorized nozzle drives the brush roll to agitate, sweep, and comb the carpet nap. The belt should be checked regularly to be sure that it is in good condition. Replace the belt if it is stretching, cracking, or slipping. Cut away any hair or thread wound around the brush roll or belt pulleys because the buildup could cause the belt to rotate unevenly.


How to Replace Worn Belt or Headlight Bulb

NOTE: Disconnect power cord and wands from electrical hose before replacing belt or bulb. Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.

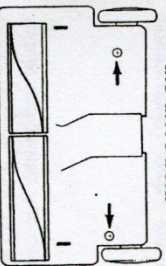


1. Remove two screws from bottom side. Turn over to grasp hood by handle socket and lift forward.


Replace headlight bulb, if necessary. Use **GENUINE EUREKA 25 watt replacement bulb 40009A**. Continue to step 2 to change belt. Skip to step 7 and 8 to replace hood on motorized nozzle.

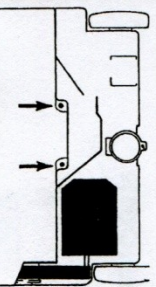


2. Remove two screws located in front of the light bulb and lift up to remove the brush roll cover.

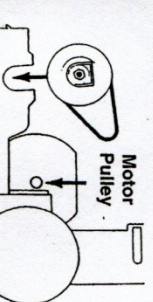

 
3. Lift out brush roll; replace new belt around brush roll pulley.



4. Return brush roll into base.

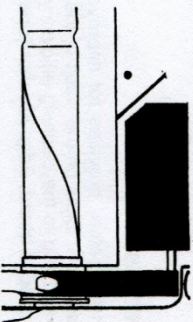

5. Rotate belt onto motor pulley.
6. Replace brush roll cover.

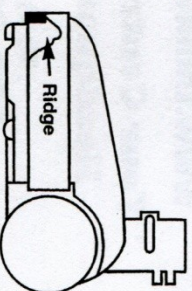

7. Tilt cover over ridge and push down.
8. Secure with screws on underside (refer to 1).

